 


PORTABLE CD SYSTEM

OPERATION INSTRUCTION

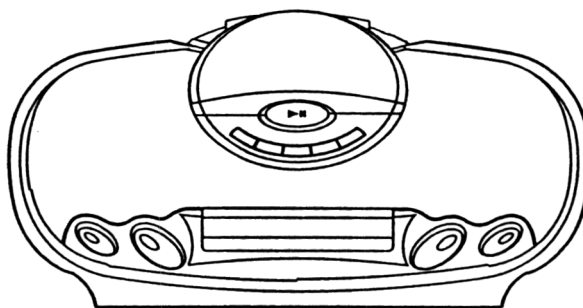

COMPACT
disc
DIGITAL AUDIO

 <p>The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	<p>WARNING</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
--	--	---

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE

CLASS 1 LASER PRODUCT

**CLASS 1 LASER
PRODUCT
APPAREIL À LASER DE
CLASSE 1**

CAUTION
INVISIBLE LASER RADIATION WHEN
OPEN AND INTERLOCKS DEFEATED.
AVOID EXPOSURE TO BEAM



This product contains a low power laser device.

SAFETY PRECAUTIONS

Follow the advice below for safe and appropriate operations.

ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

ON AC VOLTAGE

- Before use, check that the rated voltage of your unit matches your local voltage.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

 
FCC INFORMATION

This device complies with part 15 of FCC Rules. Operations are subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesirable operations.

Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.

NAMES OF CONTROLS

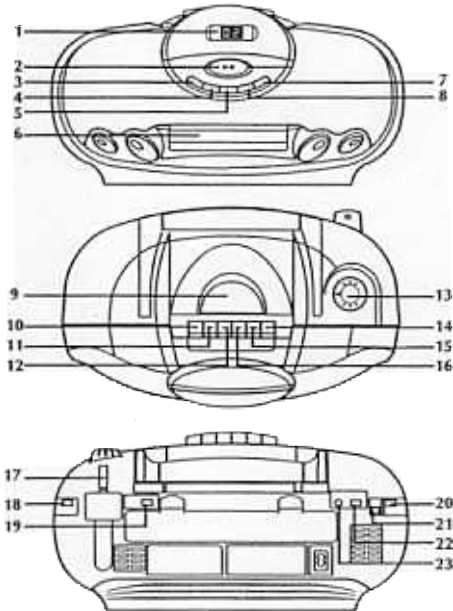

 1. CD display

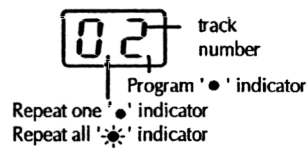


2. CD PLAY/PAUSE button
3. CD REPEAT/PROGRAM button
4. CD STOP button
5. CD OPEN/CLOSE button
6. CD door
7. SKIP/SEARCH (forward) button
8. SKIP/SEARCH (reverse) button
9. Cassette compartment

10. RECORD button
11. PLAY button
12. REWIND button
13. TUNING control
14. PAUSE button
15. STOP/EJECT button
16. F.FWD (forward) button
17. Micro antenna
18. BAND switch
19. MODE switch
20. FUNCTION switch
21. VOLUME control
22. TONE switch
23. PHONES jack

USING THE CD PLAY

 1. Set the FUNCTION switch to CD. "---" is show in the display.




2. Press OPEN/CLOSE to open the CD tray. Place a disc in the centre with the label side up. Press OPEN/CLOSE again to close the tray. The total number of tracks will show in the display.



3. Press PLAY/PAUSE (▶||) to start CD play.

 - Adjust the VOLUME.




TO STOP PLAYBACK

- Press (■) STOP to stop disc play.




TO INTERRUPT PLAYBACK


- Press (▶||) PLAY/PAUSE while a CD is playing to pause play (the track number will blink).

 

- Press (▶||)PLAY/PAUSE again to resume play (the "Play/Program" indicator will light).

 

POWERING UP

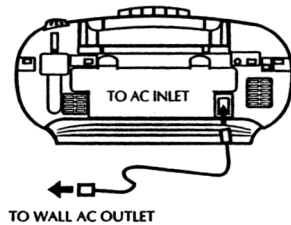 


AC POWER

You can power your portable stereo system by plugging the detachable AC power cord into the AC inlet on the back of the unit and into a wall AC power outlet.

Check that the rated voltage of your unit matches your local voltage.

Make sure that the AC power cord is fully inserted into the unit.

 
Caution: Match wide blade of plug to wide slot, fully insert.

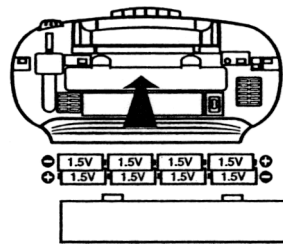

BATTERY POWER

Insert 8 "C" size batteries in the battery Compartment. Be sure that the batteries are inserted correctly to avoid damage to the unit. Always remove the batteries when unit will not be used for a long period of time, as this will cause leakage to the batteries and subsequently damage to your set.

 ADJUSTING THE SOUND

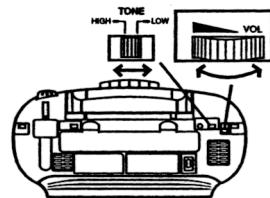

- Adjust the Volume and TONE.

WHEN RECORDING

The VOLUME control may be adjusted with no effect on the recorded signal.

For private listening

Connect headphone (Ø3.5mm stereo mini-plug) to the PHONES jack.

When headphones are connected, the speakers are automatically disconnected.



Keep it pressed during play

TO SEARCH TROUGH TRACKS

- Search function is possible only in playback mode.
- Keep press either one of the (◀◀/▶▶) SKIP/SEARCH buttons according to the desired direction, and release at the desired point.



First press skips to the beginning of the current track.

TO SKIP TO THE BEGINNING OF A TRACK

- Press either one of the (◀◀/▶▶) SKIP/SEARCH buttons according to the desired direction, each press skips one track.
- Playback resumes from the selected track.

 
PROGRAM PLAY (at stop mode)

1. Press the PROGRAM/REPEAT button.



2. Press the (◀◀/▶▶) SKIP/SEARCH button until the desired track appears on the CD display.


CD DISPLAY



Program indicator steady

3. Press the PROGRAM/REPEAT button.

 CD DISPLAY



Program indicator blinks


4. Press steps 2 and 3 until all the desired tracks are programmed (up to 32 tracks).

When "PC." is displayed the track memory is full.


5. Press (▶||)PLAY/PAUSE button.

NOTE: Programming can only be done when the unit is in the stop mode.

 RADIO OPERATION

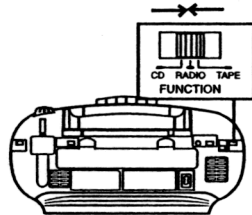

 You can listen to your favourite radio stations by sliding the FUNCTION switch to RADIO, and then

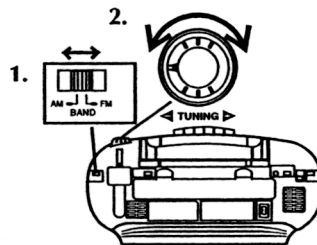


1. Use the BAND switch to choose AM(MW) or FM.

2. Use the TUNING control to choose a station.

- Adjust the VOLUME and TONE.

 
AM(MW)

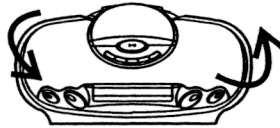

- Reposition the unit to get better AM (MW) reception.



- Extend the antenna to get better FM reception.

 FM

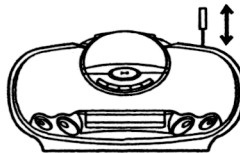




If the FM signal is weak move the mode switch to FM MONO position to reduce hiss. Move it back to FM STEREO to hear stereo sound.

  Note: After listening, set the FUNCTION switch to TAPE.
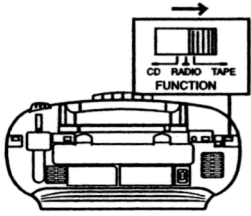
<p>CD DISPLAY</p>  <p>Program indicator</p>	<p>TO CHECK WHAT HAS BEEN PROGRAMMED</p> <ol style="list-style-type: none"> 1. Press the PROGRAM/REPEAT button. 2. Press (▶) PLAY/PAUSE button. 3. Press the (▶▶) SKIP/SEARCH button.
	<p>TO CLEAR THE PROGRAM</p> <ul style="list-style-type: none"> • Set the FUNCTION switch to TAPE or RADIO. <p>OR</p> <ul style="list-style-type: none"> • Open the CD door (during stop mode).

REPEAT PLAY (at play mode)

   
This function allows one track, all tracks on a disc or the programmed tracks only to be played repeatedly.

<p>CD DISPLAY</p>  <p>Repeat one indicator</p>	<p>TO REPEAT THE SAME TRACK</p> <ul style="list-style-type: none"> • Press the PROGRAM/REPEAT button once during playback, the REPEAT indicator will light.
<p>CD DISPLAY</p>  <p>Repeat all indicator</p>	<p>TO REPEAT THE WHOLE DISC OR PROGRAMMED TRACKS</p> <ul style="list-style-type: none"> • Press the PROGRAM/REPEAT button a second time to repeat all tracks, the REPEAT indicator will blink.
<p>CD DISPLAY</p>  <p>Repeat indicator turned off</p>	<p>TO CANCEL REPEAT PLAY</p> <ul style="list-style-type: none"> • Press the REPEAT button until REPEAT indicator is turned off. <p>NOTE: Repeat play can only be done when the unit is in the play mode.</p>

Note: After listening, set the FUNCTION switch to TAPE.

USING THE CASSETTE COMPARTMENT

 
1

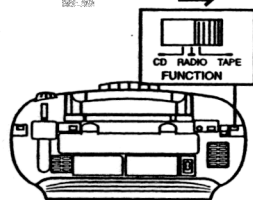

TAPE PLAYBACK


1. Set the FUNCTION switch to TAPE.

 2

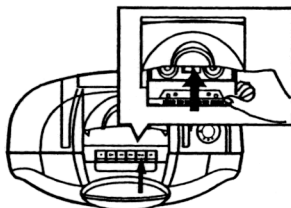


2. Insert a cassette tape with the exposed tape towards you and the full reel to your left.

 3




 3. Press the (▶) PLAY button.




TO PAUSE

- Press the (||) PAUSE button to pause recording or playback. The drive motor keeps running. Press PAUSE again to resume.

 


TO STOP PLAYBACK

 - Press the (■▲) STOP/EJECT button.




TO FAST WIND

 - Press the (◀) F.FWD or (▶) REWIND button.
- Press the (■▲) STOP/EJECT button to stop winding at the desired position.



CARE & MAINTENANCE

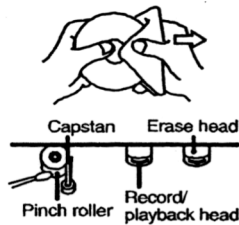 

CLEANING CD

If the CD skips or will not play, the disc may need cleaning. Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.

CLEANING THE TAPE HEADS

Clean the head with a cotton bud slightly moistened with cleaning fluid or denatured alcohol.

CLEANING THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

IMPORTANT NOTICE:


- Should the CD door be opened before the reading of the CD is completed, a jamming noise may occur. This can be resolved by closing the CD door and then setting the FUNCTION switch temporarily to TAPE.
- If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

TROUBLE SHOOTING TIPS


	Problem	Solutions
CD	System does not turn on	<ul style="list-style-type: none"> • Make sure AC power plug is secure in the outlet, and outlet has power. • Batteries may be dead. Install new batteries.
	Disc in place but unit won't play	<ul style="list-style-type: none"> • Make sure FUNCTION switch is set to CD. • Make sure disc label is facing up. • Make sure disc is clean. • Pause mode is activated.
	Disc skips	<ul style="list-style-type: none"> • Disc may be damaged or dirty; check disc. • Make sure the unit is on a secure spot. Vibration or jarring can cause the disc to skip.
RADIO	Poor FM reception	<ul style="list-style-type: none"> • Make sure FM telescopic antenna is fully extended. • Electrical interference in your home can cause poor reception. Move the unit away from sources of interference (especially those with motors and transformers).
	Poor AM(MW) reception	<ul style="list-style-type: none"> • Reposition or turn the unit for better reception.
TAPE	Distorted or noisy recording	<ul style="list-style-type: none"> • Tape heads are dirty; clean them. • Tape is damaged. Try another tape.
	Record button won't depress	<ul style="list-style-type: none"> • Tabs on edge of cassette may be missing or broken. If you want to record on that cassette, cover the holes with removable tape.

RECORDING

 USE ONLY NORMAL (TYPE I) TAPE FOR RECORDING.

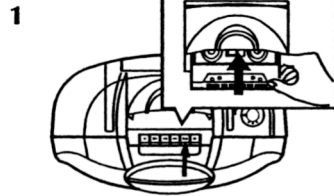

 
1. Insert a cassette tape.




2. Prepare the source to be recorded and play it.

Recording from a CD
(Refer to CD play) **OR**
Recording from the radio
(Refer to radio operation)

 If you hear a whistling noise when you start recording from AM(MW) radio, move the MODE SWITCH to position 1 or 2 to reduce the noise.



 3. Press the (●) RECORD button.
Recording starts immediately.
The (◀) PLAY button is depressed automatically.



TO STOP RECORDING

Press the (■▲) STOP/EJECT button.

WHEN THE END OF THE TAPE IS REACHED

The tape stop and the buttons are released. To record on the other side, turn the cassette over and press the (●) RECORD button again.

 
TO ERASE A RECORDED TAPE

1. Set the function switch to TAPE.

2. Insert a tape with the side you want to erase facing you.

3. Press the ● RECORD button to start erasing.

REMOTE FOR CD PLAY (OPTION)

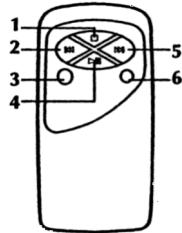

1. STOP button
2. SKIP (reverse) button
3. OPEN/CLOSE button
4. PLAY/PAUSE button
5. SKIP (forward) button
6. REPEAT/PROGRAM button

INSTALLING BATTERIES

- Install two R03 (AAA or UM-4) size batteries into the battery compartment of the Remote Control.

USING THE REMOTE CONTROL CORRECTLY

- Point the Remote Control at the REMOTE CONTROL sensor located next to the CD Display. Press the button required.
- When there is a strong ambient light source, the performance of the infrared REMOTE CONTROL sensor may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 6 meters.

BATTERY REPLACEMENT

- When batteries become weak, the operating distance of the Remote Control is greatly reduced and you will need to replace the batteries.

NOTE

- If the Remote Control is not going to be used for a long time, remove the batteries to prevent possible damage through battery leakage.
- Do not mix different types of batteries, or old batteries with new ones.

SPECIFICATION

Power consumption:	18 W
Power source:	AC 120V ~ 60 Hz (USA and Canada)
	AC 230V ~ 50 Hz (Europe)
	AC 240V ~ 50 Hz (Australia)
	AC 110-120V/220-240V ~ 50/60Hz(Others)
	DC 12 V (8 x C-size or LR14 batteries)
Specifications subject to change without notice.	